SSP


Plug Valve Locking Kit Maintenance Instructions

If the valve is disconnected form a system for installation, it must be depressurized, cycled, and purged.

WARNING To be used with padlock shackle diameters of 1/4" to 5/16" only.



LDSSK Assembly

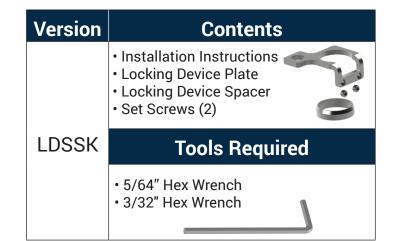

LDSSK Instructions

- 1. Nest the locking device spacer into the locking device plate.
- 2. Insert handle hub into the locking device sub-assembly from previous step. Orient handle tail to lock hole as shown.
- 3. Place locking handle sub-assembly onto stem of plug and install the set screw into the handle using a 3/32" hex wrench so that it attaches the handle to the plug
- 4. Install locking device set screws into locking device plate using a 5/64" hex wrench and lightly tighten until screws contact body and are even.
 (Do not over-tighten set screws)

Note: Screws may be preinstalled in locking device plate



Tapered end of spacer toward bottom of plate as shown





Lock hole and handle stop pin must be on same side during installation



PVLKII-24A