
Installation Instructions

Plug Valve Locking Kit



- Installation Instructions
- Locking Device




Tools Required:


• 3/32" hex wrench


Instructions:

- 1. Loosen handle set screw using 3/32" hex wrench.
- 2. Remove handle from valve.

3. Place locking device on valve. Orient locking device notch with valve stop pin as shown.

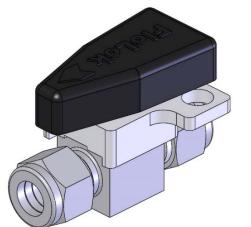

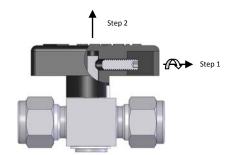

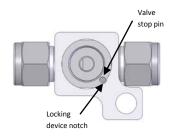

- 4. Replace valve handle and tighten handle set screw.
- 5. Test valve for proper operation.



If the valve is disconnected from a system for installation, it must be depressurized, cycled, and purged.

To be used with padlock shackle diameters of 1/4 in. to 5/16 in. only.

